




[Adobe PDF Downloadable Version of Article](#)



1) Point the pistol pointed in a safe direction

2) Open the loading gate and rotate the cylinder to ensure the pistol is unloaded.

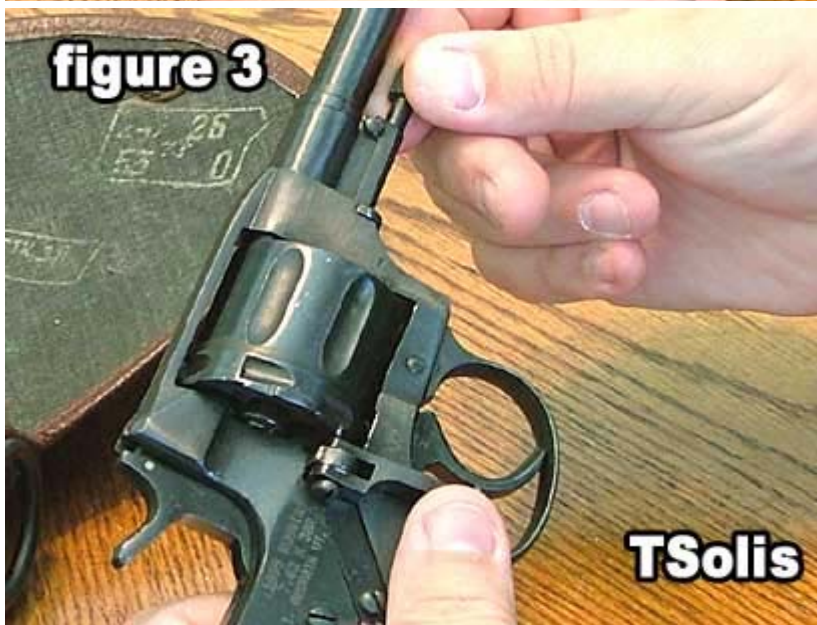


3) Turn the ejector rod counter clockwise 1/2 turn.

4) Pull the ejector rod forward.




5) Rotate the ejector sleeve clockwise if holding the pistol as shown in figure 5.

6) On the left hand side of the pistol you will see two small marks that are cut into the ejector sleeve and the frame. Line up the two lines as shown in figure 6.

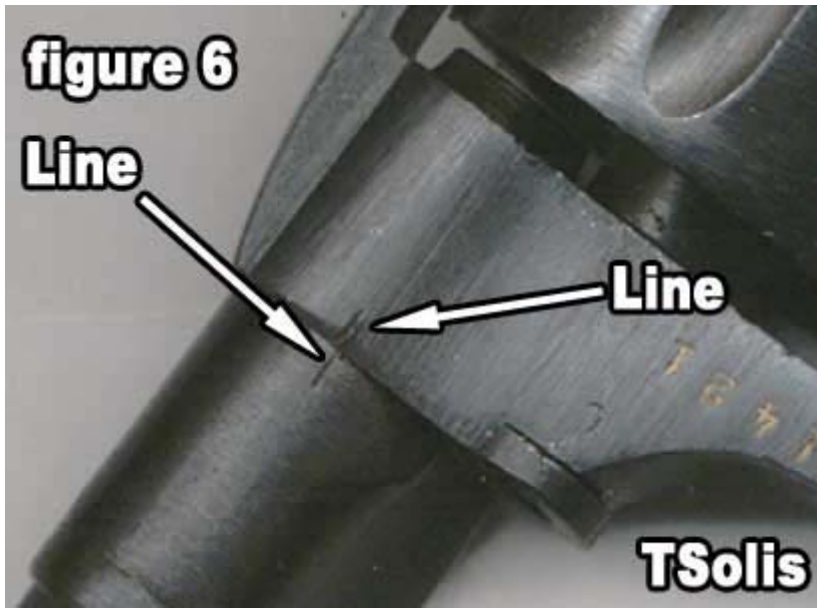

7) Now pull the cylinder pin forward.

8) Remove the cylinder pin and set aside.

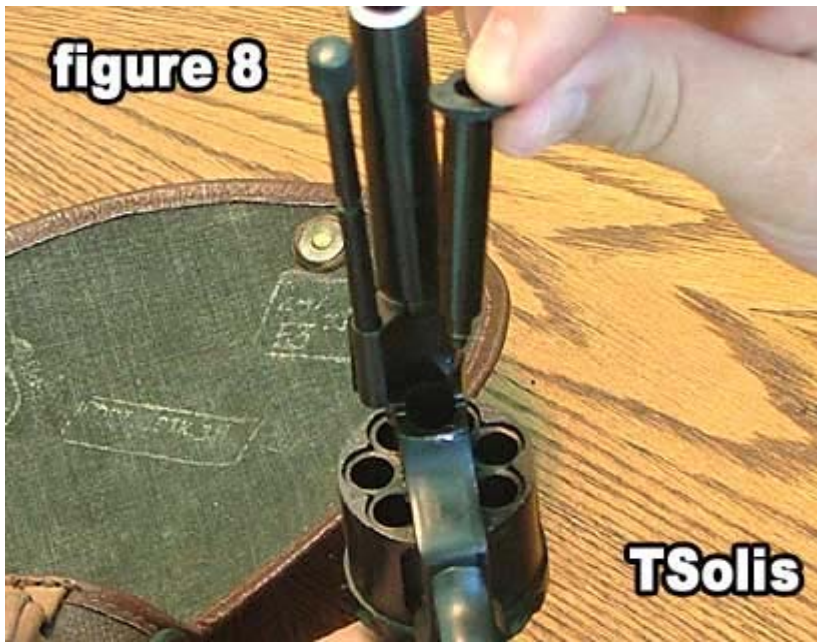

9) Remove the cylinder from as shown in figure 9.

### Reassembly Instructions

10) Open the loading gate of the pistol.



11) Insert the cylinder.

12) Line up the cylinder pin as shown in figure 12.



13) Slide the cylinder pin into place.

14) Rotate the ejector sleeve counter clockwise if holding the pistol as shown in figure 14.



15) Insert ejector and turn 1/2 turn clockwise.

16) Close the loading gate.



[Adobe PDF Downloadable Version of Article](#)