

Collecting and Shooting the Military Surplus Rifle



DuraCoat
Firearm Finishes
LAUER CUSTOM WEAPONRY

Impervious to Impact, scratching, solvents and climate! Easy to apply! No pre-heating, blasting or baking required. Available in over sixty colors and 15 Peel 'N Spray CamoPak

OUR
SPONSORS

Please make certain to visit our new Showcase of Sponsors!
[More!](#)




Your one-stop source for profess

Kalinka Optics Warehouse

<http://www.kall>



[Adobe PDF Downloadable Version of Article](#)

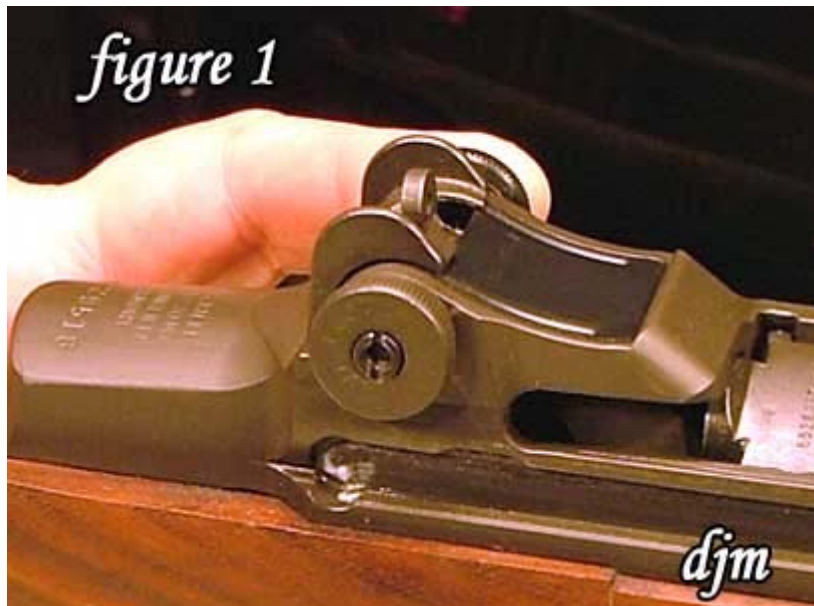

1) With your hand hold the elevation screw in place.

2) Using either a flat blade screw driver or the Garand multi-function tool loosen the nut on the windage knob.



3) Unscrew the windage knob.

4) Remove the windage knob.



5) Remove the elevation knob.

6) Remove the aperture.



7) Lift up on the sight base and depress the cover spring inward so it can be lifted out.

8) Remove and separate the base and cover spring.



Reassembly Instructions



9) Combine the base and cover spring.

10) Insert the base and cover spring into the receiver.



11) Depress the cover inward so it can be snapped into place.

12) Insert the aperture.



figure 12

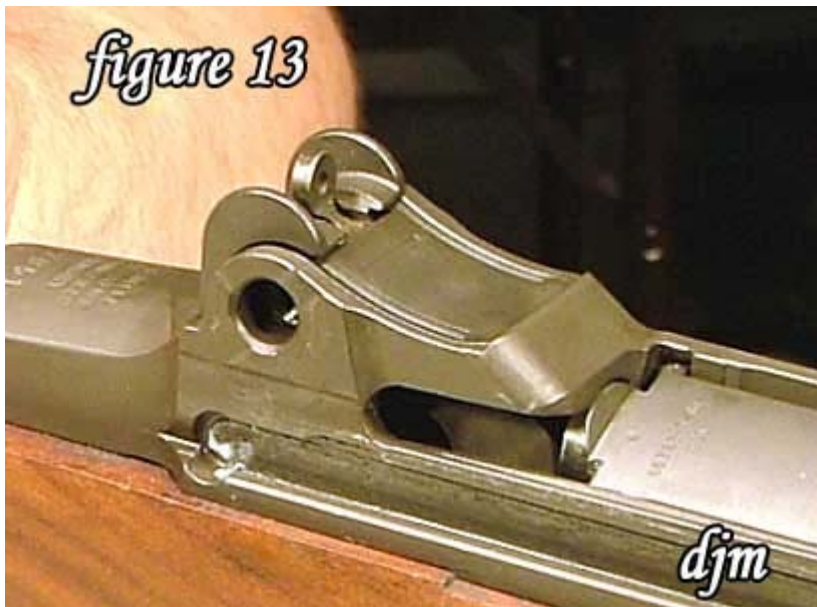


figure 13

13) Make the aperture is seated all of the way down .

14) Insert the elevation knob assembly so the 200 yard graduation is lined up with the elevation index line on the sight base.



15) Insert the windage knob.



16) Tighten the windage knob.



17) Tighten the windage knob nut.

18) Operate the elevation knob to make sure it functions without binding.



19) Operate the windage knob to make sure it functions without binding.

[Adobe PDF Downloadable Version of Article](#)